


彩色电视机电路电原理图

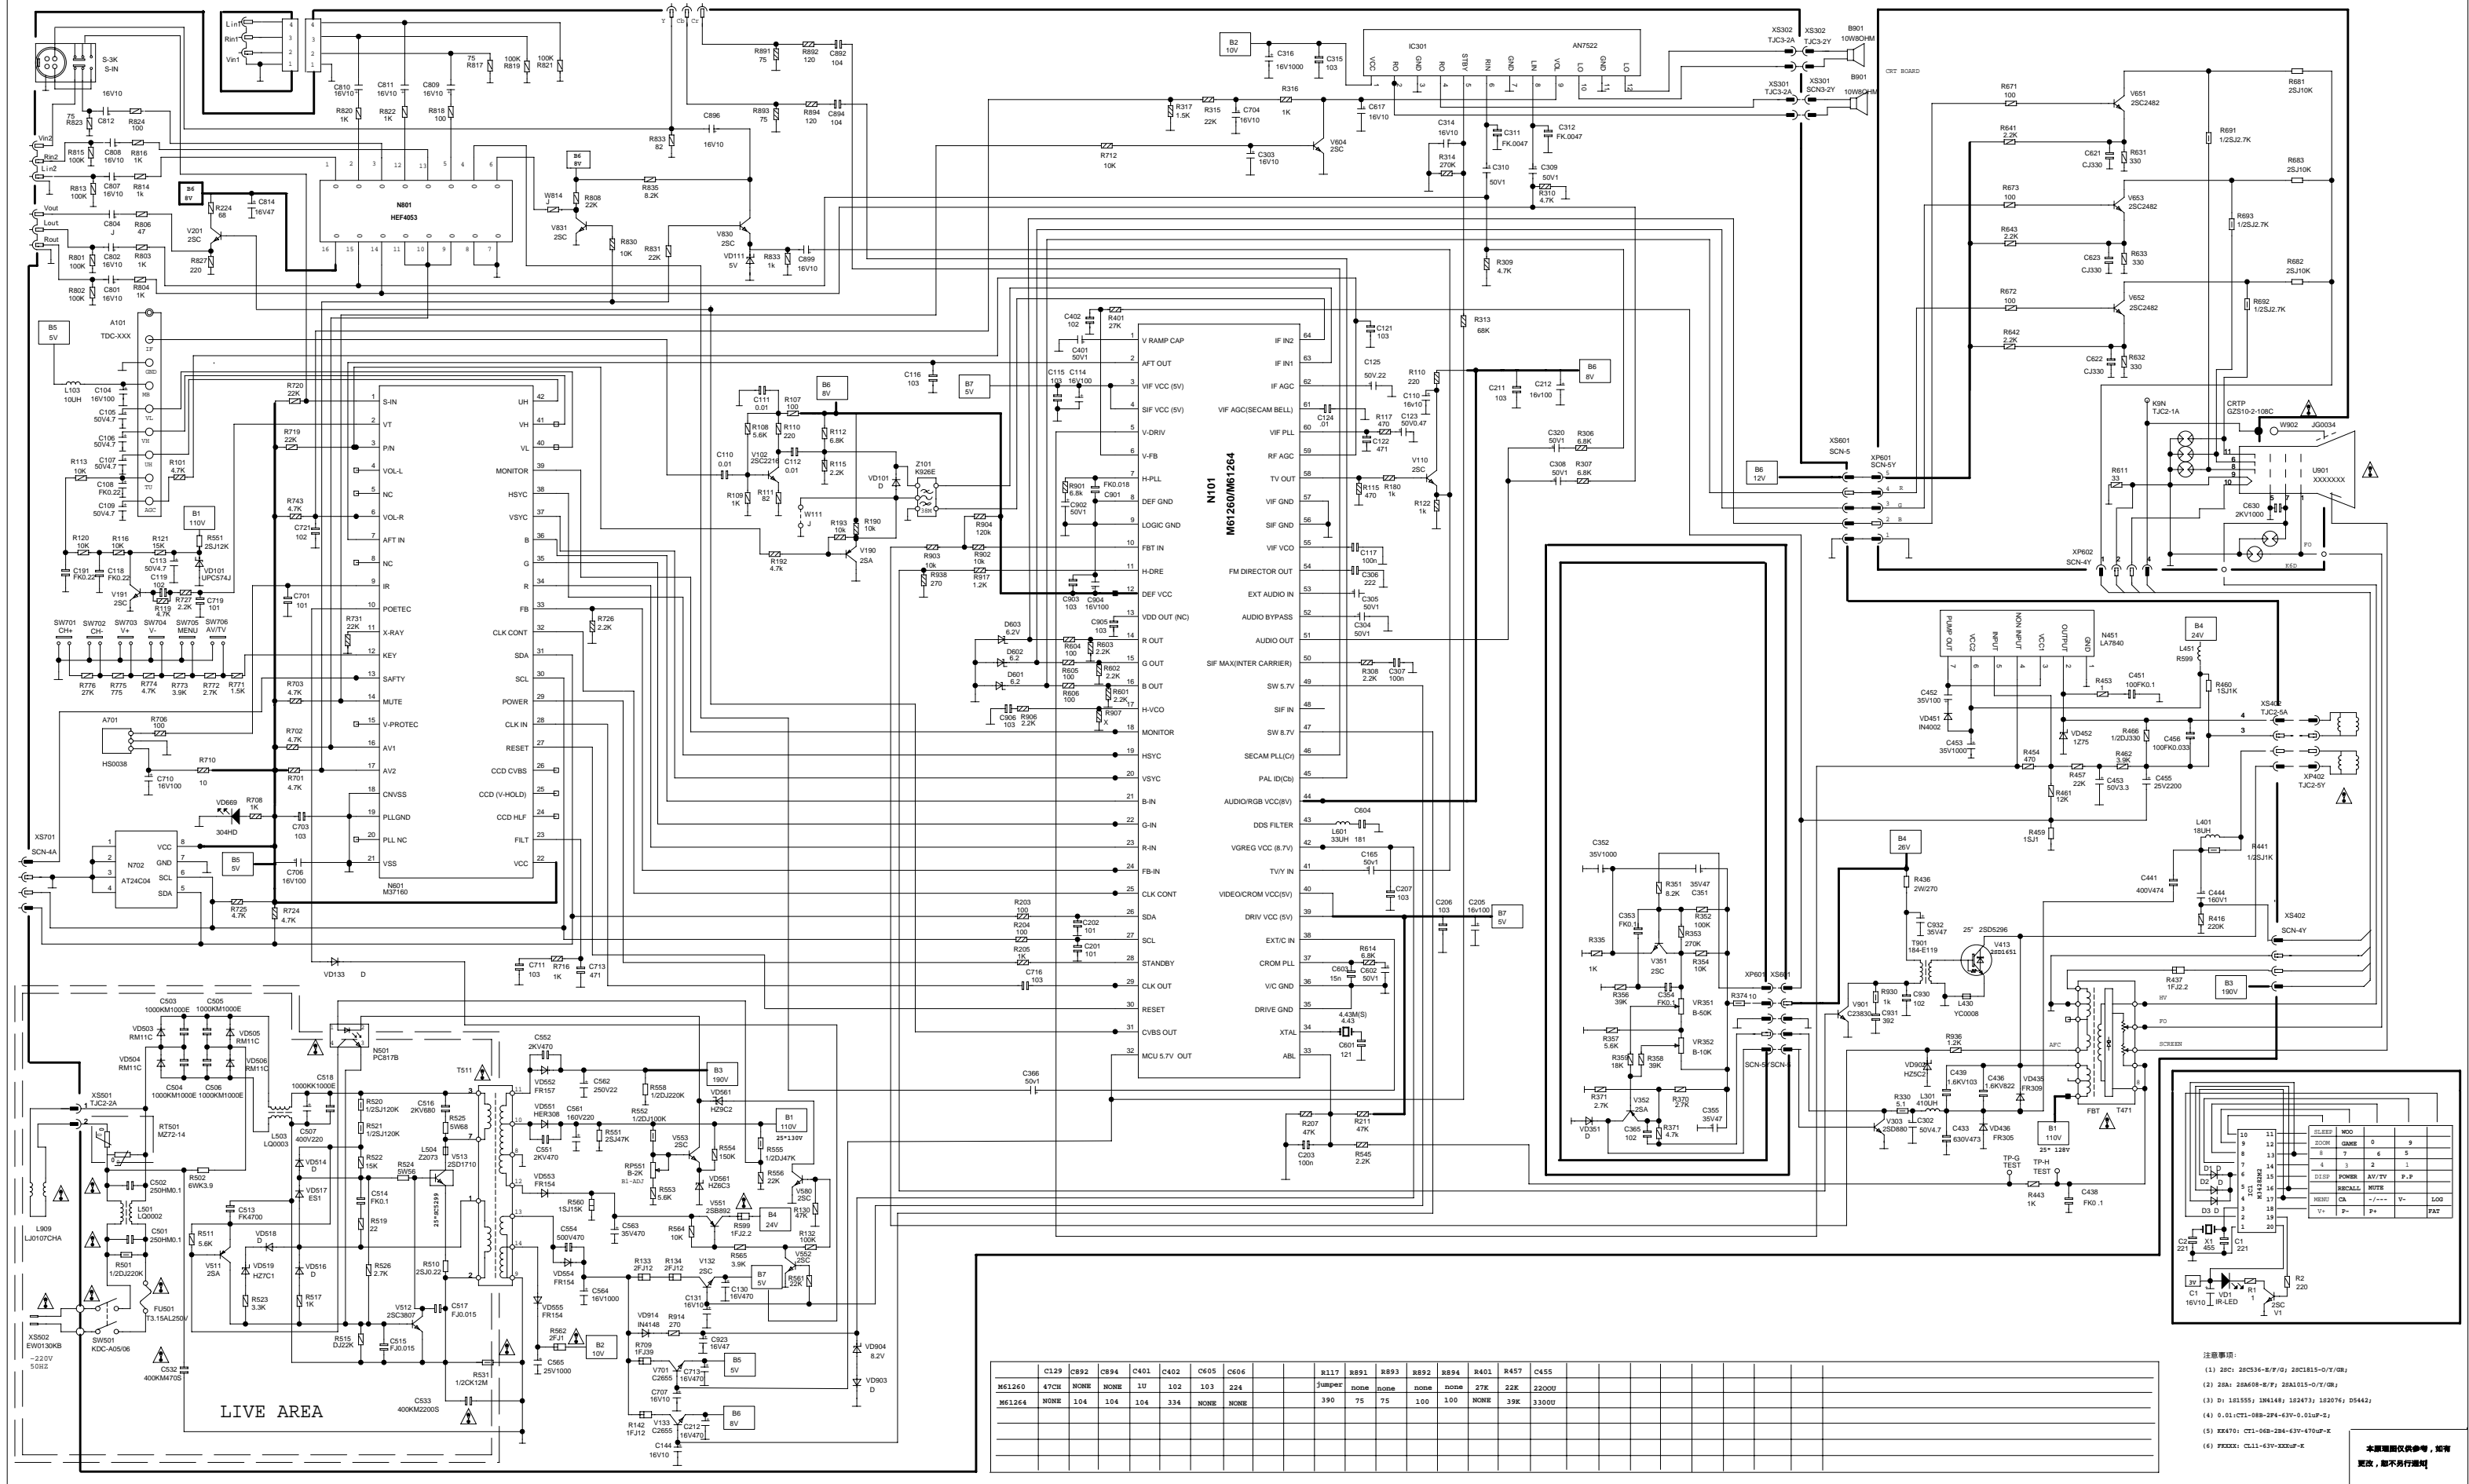

注意事项:

(1) 28C: 28C136-E/P/G; 28C1815-O/T/G;

(2) 28A: 28A08-E/P; 28A1015-O/T/G;

(3) D: 181555; 18A148; 18A143; 18A147; 18A149; D5442;

(4) 0.01:CT1-08B-2P4-63V-0.01uF-E;

(5) KR470: CT1-08B-2P4-63V-0.01uF-E;

(6) PRXKX: CL11-63V-XXXX-E

本图仅供参考, 如有更改, 恕不另行通知